

DATA SHEET

vibro-meter®

VM600^{Mk2} CPUM^{Mk2} + IOCN^{Mk2} rack controller and communications interface module

KEY FEATURES AND BENEFITS

- VibroSight® compatible hardware from the vibro-meter® product line
- VM600^{Mk2} (second generation) rack controller and communications interface module
- VM600^{Mk2} module data aggregation, processing and sharing
- Industry standard fieldbus communications interfaces: Modbus TCP and PROFIBUS DP
- Mathematical processing of data to be shared via fieldbus
- System/module status (health) information available via fieldbus
- Front-panel alarm reset (AR) button
- VM600^{Mk2} rack (CPUM^{Mk2}) security with a removable key
- Two system Ethernet connections and two fieldbus connections can run simultaneously
- Communications redundancy with two fieldbuses: Ethernet and/or serial
- Two output relays to signal system statuses and alarms



Information contained in this document may be subject to export control regulations of the European Union, USA or other countries. Each recipient of this document is responsible for ensuring that transfer or use of any information contained in this document complies with all relevant export control regulations. ECN N/A.



CPUM^{Mk2}

IOCN^{Mk2}



KEY BENEFITS AND FEATURES (continued)

- CPUM^{Mk2} + IOCN^{Mk2} module diagnostic logs available via the VibroSight® software
- Live insertion and removal of modules (hot-swappable)
- Gigabit (1 Gbps) system Ethernet communication
- Front-panel status indicators (LEDs)
- Compatible with later VM600 system racks (ABE04x) with I²C interface (VME utility bus)

APPLICATIONS

- Rack controller for a VM600^{Mk2} system
- Communications gateway between VM600^{Mk2} and third-party systems (DCS or PLC)

DESCRIPTION

Introduction

The VM600^{Mk2} CPUM^{Mk2} + IOCN^{Mk2} rack controller and communications interface module is designed for operation with the second generation of VM600^{Mk2} rack-based machinery protection system (MPS), from Meggitt's vibro-meter[®] product line. The CPUM^{Mk2} + IOCN^{Mk2} module consists of central processing unit (CPU) and input/output (interface) modules that act as a system controller and data communications gateway for VM600^{Mk2} systems.

VM600^{Mk2} rack-based monitoring systems

The vibro-meter[®] VM600^{Mk2} rack-based monitoring system is the evolution of Meggitt's solution for the protection and monitoring of rotating machinery used in the power generation and oil & gas industries. VM600^{Mk2} solutions are recommended when a centralised monitoring system with a medium to large number of measurement points (channels) is required. It is typically used for the monitoring and/or protection of larger machinery such as gas, steam and hydro turbines, and generators, smaller machines such as compressors, fans, motors, pumps and propellers, as well as balance-of-plant (BOP) equipment.

A VM600^{Mk2} system consists of a 19" rack, a rack power supply and one or more monitoring modules. Optionally, relay modules and rack controller and communications interface modules can also be included.

Two types of rack are available: a VM600^{Mk2} system rack (ABE04x, 6U) that can house up to twelve monitoring modules, and a VM600^{Mk2} slimline rack (ABE056, 1U) that can house one monitoring module. The racks are typically mounted in standard 19" rack cabinets or enclosures installed in an equipment room.

APPLICATIONS (continued)

- Enables sharing of data from VM600^{Mk2} monitoring modules in machinery protection, condition monitoring and/or combustion monitoring applications

Different VM600^{Mk2} monitoring modules are available for machinery protection, condition monitoring and/or combustion monitoring applications. For example, the MPC4^{Mk2} + IOC4^{Mk2} module supports both machinery protection and condition monitoring, the XMV16 + XIO16T module supports extended condition monitoring for vibration and the XMC16 + XIO16T module supports extended condition monitoring for combustion.

Note: For the MPC4^{Mk2} + IOC4^{Mk2} machinery protection and condition monitoring module, the machinery protection functionality is available by default, while the condition monitoring functionality is optional and depends on the purchased VibroSight[®] software license.

The RLC16^{Mk2} relay module is an optional module used to provide additional relays when the four user-configurable relays per MPC4^{Mk2} + IOC4^{Mk2} module are not sufficient for an application.

The CPUM^{Mk2} + IOCN^{Mk2} rack controller and communications interface module is an optional module used to provide additional VM600^{Mk2} system functionality such as fieldbus communications (Modbus TCP and/or PROFIBUS DP); module data aggregation, processing and sharing; rack and/or fieldbus communications redundancy; front-panel alarm reset (AR); MPS rack (CPUx) security; system event and measurement event logging.

VM600^{Mk2} rack-based monitoring systems complement the VibroSmart[®] distributed monitoring systems that are also available from Meggitt's vibro-meter[®] product line, and are compatible with the same VibroSight[®] machinery monitoring software suite.

DESCRIPTION (continued)

CPUM^{Mk2} + IOCN^{Mk2} module and VM600^{Mk2} racks

The CPUM^{Mk2} + IOCN^{Mk2} rack controller and communications interface module is used as part of a VM600^{Mk2} rack-based monitoring system. The CPUM^{Mk2} + IOCN^{Mk2} module can be used in a VM600^{Mk2} system rack (ABE04x).

The CPUM^{Mk2} module is always used with an associated IOCN^{Mk2} module as a pair/set of modules. Both the CPUM^{Mk2} and the IOCN^{Mk2} are single-width modules that occupy a single VM600^{Mk2} rack slot (module position). The CPUM^{Mk2} is installed in the front of a VM600^{Mk2} rack (typically slot 0) and the associated IOCN^{Mk2} is installed in the rear of the rack (typically slot 0), in the slot directly behind the CPUM^{Mk2}. Each module connects directly to the rack's backplane using two connectors.

Note: The CPUM^{Mk2} + IOCN^{Mk2} module is compatible with VM600^{Mk2} racks (ABE04x system racks) and later VM600 racks (ABE04x system racks) with I²C interface (VME utility bus).

CPUM^{Mk2} + IOCN^{Mk2} module functionality

As a fieldbus communications interface for a VM600^{Mk2} monitoring system, the CPUM^{Mk2} module communicates with other VM600^{Mk2} modules in the rack (such as the MPC4^{Mk2}) via the rack's VME bus and with XMx16 modules via a system Ethernet link in order to obtain measurement data and then share this information with third-party systems such as a DCS or PLC.

Note: The CPUM^{Mk2} is not compatible with the MPC4/IOC4T and AMC8/IOC8T (that is, first-generation VM600^{Mk1} cards).

The data shared via fieldbus can be the "raw" measurement data obtained from MPC4^{Mk2} or XMx16 modules, and/or the status (health) data obtained from the CPUM^{Mk2} modules, or the data can be further processed as required. For example, the processing supported includes basic mathematical functions such as arithmetic and logical operations, and many other supporting functions.

Note: The CPUM^{Mk2} can be used as a data communications gateway for XMx16 modules in low data-bandwidth applications. For example,

handling hundreds of bytes of static data via Modbus TCP and/or PROFIBUS DP. However, the CPUM^{Mk2} cannot be used as a gateway for XMx16 modules in high data-bandwidth applications as the dynamic data (waveforms and spectra) generated by XMx16 modules typically requires a direct connection to the VibroSight[®] software.

As a rack controller for a VM600^{Mk2} monitoring system, the CPUM^{Mk2} module can manage the configuration of XMx16 + XIO16T modules that are operating without a VibroSight Server. (Note: MPC4^{Mk2} + IOC4^{Mk2} modules are configured by VibroSight Protect.) The ALARM RESET button on the front panel of the CPUM^{Mk2} module can be used to clear the alarms latched by the monitoring modules (MPC4^{Mk2}) in the rack. This is a rack-wide equivalent of resetting alarms individually for each module using discrete signal interface alarm reset (AR) inputs or VibroSight[®] software commands.

A security key lock, with a removable key, on the front panel of the CPUM^{Mk2} module can be used to enable VM600^{Mk2} rack (CPUM^{Mk2}) security.

LEDs on the front panel of the CPUM^{Mk2} module indicate the mode of operation and status of the CPUM^{Mk2} + IOCN^{Mk2} module, and the status of its system Ethernet and fieldbus communications.

IOCN^{Mk2} module

The IOCN^{Mk2} module acts as a signal and communications interface for the CPUM^{Mk2} module. It also protects all inputs against electromagnetic interference (EMI) and signal surges to meet electromagnetic compatibility (EMC) standards.

LEDs on the front panel of the IOCN^{Mk2} module (rear of VM600^{Mk2} rack) indicate the status of its system Ethernet and fieldbus communications.

Fieldbus communications

The CPUM^{Mk2} + IOCN^{Mk2} module has two fieldbus interfaces (ports), FIELDBUS1 and FIELDBUS2, available on the IOCN^{Mk2} module (rear of VM600^{Mk2} rack).

Both fieldbus ports allow the CPUM^{Mk2} module to act as a data communications gateway between a VM600^{Mk2} rack and external devices

DESCRIPTION (continued)

that use fieldbus networks. In order to do this, the CPUM^{Mk2} acts as a fieldbus server (slave) device that obtains data from the modules in the VM600^{Mk2} rack (MPC4^{Mk2} and XMx16 modules, and the CPUM^{Mk2} module itself) to share with fieldbus client (master) devices such as a DCS or PLC via one of the CPUM^{Mk2} + IOCN^{Mk2} module's fieldbus interfaces: Modbus TCP and/or PROFIBUS DP.

Each fieldbus port, FIELDBUS1 and FIELDBUS2, consists of two connectors, one for serial-based fieldbus standards and one for Ethernet-based. Both fieldbus ports can be active at the same time but only one connector can be used per interface/port (connector J1 or J2 for FIELDBUS1, and connector J4 or J5 for FIELDBUS2).

In addition, the system Ethernet ports support Modbus TCP, which also allow the CPUM^{Mk2} module to share data from the other modules in the VM600^{Mk2} rack.

The data to be shared by fieldbus can be mathematically processed before it is shared and the results of "data freeze" detection can also be shared via fieldbus.

System communications

The CPUM^{Mk2} + IOCN^{Mk2} module has two system Ethernet interfaces (ports), ETHERNET1 and ETHERNET2, available on the IOCN^{Mk2} module (rear of VM600^{Mk2} rack).

Both system Ethernet ports provide the same functionality so one port is typically allocated for communications with the VibroSight[®] software while the other port is allocated for communications with monitoring modules such as the XMx16 + XIO16T.

VM600^{Mk2} rack (CPUM^{Mk2}) security

The CPUM^{Mk2} module supports features that can be used to limit the functionality of a VM600^{Mk2} rack's machinery protection system (MPS) that is available via the system Ethernet connections of the CPUM^{Mk2} + IOCN^{Mk2} module. Enabling VM600^{Mk2} rack (CPUM^{Mk2}) security helps to reduce the possibility of interference in the machinery protection function of the rack itself and in the machinery being monitored. Accordingly, CPUM^{Mk2} rack security makes it

easier for operators to comply with international security/critical infrastructure regulations.

A security key lock on the front panel of the CPUM^{Mk2} module is used to enable or disable VM600^{Mk2} rack security as required. With security enabled, the CPUM^{Mk2} module will prevent (block) certain system operations such as the uploading of configurations and the sending of Modbus commands.

Relays

The CPUM^{Mk2} + IOCN^{Mk2} module includes two output relays to remotely indicate system status and alarm information. Each of the relays can be mapped to any Modbus bit variable and are typically used to signal a fault or a problem detected by a common alarm, such as communication status or rack status.

Software

CPUM^{Mk2} + IOCN^{Mk2} modules, as part of a VM600^{Mk2} system, are software configured using the VibroSight[®] software.

To prioritise machinery protection functionality and help meet stringent cybersecurity and API 670 requirements, the MPC4^{Mk2} + IOC4^{Mk2} module segregates machinery protection (MPS) and condition monitoring (CMS) functionality by running separate module firmware using separate configurations from different VibroSight configuration software:

- VibroSight Protect supports the configuration and operation of machinery protection system (MPS) functionality for a VM600^{Mk2} system (that is, for MPC4^{Mk2} + IOC4^{Mk2}, RLC16^{Mk2} and CPUM^{Mk2} + IOCN^{Mk2} modules).
- VibroSight Capture supports the configuration and operation of condition monitoring system (CMS) functionality for a VM600^{Mk2} system (that is, for MPC4^{Mk2} + IOC4^{Mk2} modules).

Other VibroSight software modules support operations such as data display and analysis (VibroSight Vision), data logging and post-processing (VibroSight Server) system maintenance (VibroSight System Manager), etc.

Note: The VibroSight[®] software is also from the vibro-meter[®] product line.

DESCRIPTION (continued)

Applications information

As part of a VM600^{Mk2} system, the CPUM^{Mk2} + IOCN^{Mk2} rack controller and communications interface module communicates with other VM600^{Mk2} modules in the rack (such as MPC4^{Mk2} + IOC4^{Mk2}) in order to provide data aggregation and processing functionality, and then share this information with third-party systems such as a DCS or PLC via industry standard fieldbus interfaces.

The CPUM^{Mk2} + IOCN^{Mk2} can also provide a global alarm reset (AR) for the monitoring

modules (MPC4^{Mk2}) in the rack. Accordingly, the CPUM^{Mk2} + IOCN^{Mk2} module is recommended for applications using multiple MPC4^{Mk2} + IOC4^{Mk2} modules in a VM600^{Mk2} rack.

The CPUM^{Mk2} + IOCN^{Mk2} module can also manage the configuration of XMx16 + XIO16T modules in certain applications, such as combustion monitoring control loops that use XMC16 + XIO16T modules.

For further information, contact your local Meggitt representative.

SPECIFICATIONS

Processing functions

- VM600^{Mk2} module data aggregation, processing and sharing (mathematical processing)
 - : Aggregation and processing of system data (measurement data and status information) from other VM600^{Mk2} modules in the rack (such as MPC4^{Mk2} + IOC4^{Mk2}) before sharing via fieldbus. The further processing supported includes basic mathematical functions/operations such as arithmetic and logical operations, data selection, comparison, min/max and scaling functions, bit manipulation and packing/unpacking functions, and many others. There is also a data freeze detection function that can be used to help detect if a data value has stopped being updated.
Note: Mathematical processing is defined by a CPUM^{Mk2} module fieldbus configuration file that is uploaded to the CPUM^{Mk2} using the VibroSight[®] software (VibroSight Configurator).
- Fieldbus communications (data gateway)
 - : Acts as a fieldbus server (slave) device that obtains data from the modules in the VM600^{Mk2} rack (that is, from MPC4^{Mk2} + IOC4^{Mk2} modules, XMx16 + XIO16T modules and the CPUM^{Mk2} module itself) to share with fieldbus client (master) devices such as a DCS or PLC:
 - The CPUM^{Mk2} can act as a Modbus server and use the Ethernet fieldbus interfaces to share data via Modbus TCP.
 - The CPUM^{Mk2} can act as a PROFIBUS server and use the serial fieldbus interfaces to share data via PROFIBUS DP.
Note: The configuration of the fieldbus interfaces and the definition of the data to be shared via fieldbus is defined by a CPUM^{Mk2} module fieldbus configuration file that is uploaded to the CPUM^{Mk2} using the VibroSight[®] software (VibroSight Configurator).
Note: It is important to note that Modbus TCP is currently supported via the system Ethernet interfaces (ports) – not via the fieldbus interfaces (ports).
- VM600^{Mk2} rack (system) communications
 - : Uses a VME communications link for communications with MPC4^{Mk2} + IOC4^{Mk2} modules (via the VME bus on the VM600^{Mk2} rack's backplane).
Uses a system Ethernet connection for communications with a computer running the VibroSight[®] software.
Uses another system Ethernet connection for communications with XMx16 modules (via an Ethernet cable external to the VM600^{Mk2} rack).

SPECIFICATIONS *(continued)*

- Status monitoring : Diagnostic log files record status (health) information for the CPUM^{Mk2} + IOCN^{Mk2} module.
Note: Diagnostic logs are downloaded from a CPUM^{Mk2} + IOCN^{Mk2} module using the VibroSight[®] software (VibroSight System Manager). This information is also available via a fieldbus interface.
- Alarm reset : CPUM^{Mk2} front-panel button used to manually reset (clear) the latched alarms (and associated relays) for the MPC4^{Mk2} + IOC4^{Mk2} modules in the rack
- VM600^{Mk2} rack (CPUM^{Mk2}) security : A security key lock, with a removable key, on the front panel of the CPUM^{Mk2} module can be used to limit the functionality of the machinery protection system (MPS) that is available via the system Ethernet connections of the CPUM^{Mk2} + IOCN^{Mk2} module. This helps to reduce the possibility of interference in the machinery protection function of the rack itself and/or in the machinery being monitored.
- Status indication : CPUM^{Mk2} front-panel LEDs (front of VM600^{Mk2} rack) indicate the mode of operation and status of the CPUM^{Mk2} module, and the status of the Ethernet and fieldbus communications.
IOCN^{Mk2} front-panel LEDs (rear of VM600^{Mk2} rack) indicate the status of the Ethernet and fieldbus communications.
- Relays : Two user-configurable CPUM^{Mk2} + IOCN^{Mk2} relays for the remote indication of system statuses and alarms.
Note: Relays can be mapped to any Modbus bit variable.
- VM600 monitoring modules configuration management : Acts as a rack controller that manages the configuration of XMx16 + XIO16T modules, for applications that do not require a VibroSight Server.

Note: Refer to VM600^{Mk2} machinery protection system (MPS) quick start manual for further information.

Fieldbus interfaces

- Number of channels : Up to 2 fieldbus interfaces (ports).
Ethernet and/or serial: Modbus TCP and/or PROFIBUS DP.
- Data transfer
- Modbus TCP : Supports the following Modbus function codes:
01 (Read coils), 02 (Read discrete inputs),
03 (Read holding registers), 04 (Read input registers),
05 (Write single coil), 06 (Write single register),
15 (Write multiple coils) and 16 (Write multiple registers).
Performance level: Approx. 1000 16-bit value requests per second.
Note: It is important to note that Modbus TCP is currently supported via the system Ethernet interfaces (ports) – not via the fieldbus interfaces (ports).
 - PROFIBUS DP : Up to 244 input bytes and 244 output bytes per fieldbus interface
 - Modbus RTU : Not currently supported.

SPECIFICATIONS *(continued)*

Communication interfaces

System communication interfaces – Ethernet

| | |
|--------------------------|--|
| Number | : 2 |
| Network interface | : 10/100/1000BASE-T(X) – Ethernet / Fast Ethernet / Gigabit Ethernet |
| Data transfer rate | : Up to 1000 Mbps (1 Gbps) |
| Distance between devices | : Up to 100 m at 1000 Mbps. For distances greater than the specified maximum (100 m), the interface will operate at reduced data transfer rates. |
| Protocols | : Meggitt TCP/IP proprietary protocol and Modbus TCP |
| Function | : VM600 ^{Mk2} module configuration and communications using the VibroSight [®] software and/or fieldbus Modbus TCP communications. XMx16 + XIO16T module configuration and communications (via CPUM ^{Mk2} + IOCN ^{Mk2} module using the VibroSight [®] software). |
| Connectors | : J6 (ETHERNET1) and J7 (ETHERNET2) on IOCN ^{Mk2} module (see Connectors on page 11) |

Fieldbus communication interfaces – Ethernet

| | |
|-------------------------------|---|
| Number | : 2 |
| Network interface | : 10/100BASE-TX – Fast Ethernet |
| Data transfer rate | : Up to 100 Mbps |
| Distance between devices | : Up to 100 m |
| Protocols | : Meggitt TCP/IP proprietary protocol and Modbus TCP |
| Function | : Fieldbus Modbus TCP communications |
| Connectors | : J2 (FIELDBUS1) and J5 (FIELDBUS2) on IOCN ^{Mk2} module (see Connectors on page 11) |
| Ethernet (fieldbus) isolation | : 1500 V _{RMS} |

Fieldbus communication interfaces – serial

| | |
|-----------------------------|---|
| Number | : 2 |
| Network interface | : RS-485 (half-duplex (2-wire)). RS-485 (full-duplex (4-wire)) subject to demand. |
| Data transfer rate | : Up to 12 Mbps, with automatic baud-rate detection |
| Distance between devices | : According to the relevant standard |
| Network topologies | : Point-to-point or linear (daisy-chained) for RS-485 networks |
| Protocols | : PROFIBUS DP: DP-V0 server (slave). Note: Modbus RTU is not currently supported. |
| Function | : Fieldbus PROFIBUS communications |
| Connectors | : J1 (FIELDBUS1) and J4 (FIELDBUS2) on IOCN ^{Mk2} module (see Connectors on page 11) |
| RS-485 (fieldbus) isolation | : 700 V _{RMS} |

Note: One serial fieldbus protocol (PROFIBUS DP) and up to two serial fieldbus interfaces are currently supported by the CPUM^{Mk2} + IOCN^{Mk2} module at any one time.

SPECIFICATIONS (continued)

System communications

- External : System communication interfaces (Ethernet) for communication with VibroSight® software running on an external computer and/or XMx16 + XIO16T modules via external Ethernet cabling.
See **System communication interfaces – Ethernet on page 7**.
- Internal – VM600^{Mk2} VME : VME bus interface (A24 / D16 master mode) for communication with controlling/processing modules via rack backplane. For example, with MPC4^{Mk2} + IOC4^{Mk2} monitoring modules.
Note: The VME bus for the CPUM^{Mk2} + IOCN^{Mk2} module can be deactivated in order to allow two CPUM^{Mk2} + IOCN^{Mk2} modules to be installed in one VM600^{Mk2} system rack (ABE04x).
This supports specific combined applications/solutions from a single VM600^{Mk2} rack. For example:
• 1 × CPUM^{Mk2} + IOCN^{Mk2} module (VME enabled) with MPC4^{Mk2} + IOC4^{Mk2} modules – for machinery protection and/or condition monitoring.
• 1 × CPUM^{Mk2} + IOCN^{Mk2} module (VME disabled) with XMC16 + XIO16T modules – for combustion monitoring.
(The CPUM^{Mk2} + IOCN^{Mk2} and XMC16 + XIO16T communicate via system Ethernet.)
- External communication links/connections
- Connection to a computer/network : Either system communication interface (J6 or J7 connector on IOCN^{Mk2} module) can be used for connections/communications between the CPUM^{Mk2} + IOCN^{Mk2} module and a computer/network, using standard Ethernet cabling.
 - Connection to VM600^{Mk2} modules : Either system communication interface (J6 or J7 connector on IOCN^{Mk2} module) can be used for connections/communications between the CPUM^{Mk2} + IOCN^{Mk2} module and XMx16 + XIO16T extended condition monitoring modules, using standard Ethernet cabling.
See **System communication interfaces – Ethernet on page 7** and **Connectors on page 11**.
- Notes
- If both system communication interfaces of the CPUM^{Mk2} + IOCN^{Mk2} module are required by an application, that is, the J6 and J7 connectors are both used, then one should be allocated for communications with a computer/network and the other should be allocated for communications with XMx16 + XIO16T modules. Accordingly, a different subnet mask must be used for each interface/port in order to partition the networks used and ensure that the communications on each are kept separate from one another.
- Connection to a fieldbus (third-party system) : Either Ethernet fieldbus communication interface (J2 or J5 on IOCN^{Mk2} module) will be used for connections/communications between the CPUM^{Mk2} + IOCN^{Mk2} module and Ethernet-based fieldbuses (Modbus TCP) in the future, using standard Ethernet cabling.
Note: Either system communication interface (J6 or J7 on IOCN^{Mk2} module) can also be used for connections/communications between the CPUM^{Mk2} + IOCN^{Mk2} module and Ethernet-based fieldbuses (Modbus TCP), using standard Ethernet cabling.
Either serial fieldbus communication interface (J1 or J4 on IOCN^{Mk2} module) can be used for connections/communications between the CPUM^{Mk2} + IOCN^{Mk2} module and serial-based fieldbuses (PROFIBUS DP), using serial cabling.
See **Fieldbus communication interfaces – serial on page 7** and **Connectors on page 11**.

SPECIFICATIONS *(continued)*

Configuration

CPUM^{Mk2} + IOCN^{Mk2} module : Fully software configurable via Ethernet, using a computer running the VibroSight[®] software

Time synchronisation

Time reference for CPUM^{Mk2} : Network time protocol (NTP) server or CPUM^{Mk2} module's internal real-time clock (RTC) with battery backup

Protocol used between VM600^{Mk2} modules and host computer : Network time protocol (NTP)

Environmental

Operating

- Temperature : 0 to 65°C (32 to 149°F)
- Humidity : 0 to 90%, non-condensing

Storage

- Temperature : -20 to 85°C (-4 to 185°F)
- Humidity : 0 to 95%, non-condensing

Approvals

Conformity : European Union (EU) declaration of conformity (CE marking)

Electromagnetic compatibility : EN 61000-6-2.
EN 61000-6-4.
EN 61326-3-1.

Electrical safety : EN 61010-1:2010

Environmental management : RoHS compliant (2011/65/EU)

Power supply to module

Power source : VM600^{Mk2} rack power supply

Supply voltages : +5 V_{DC}

Total power consumption (CPUM^{Mk2} + IOCN^{Mk2} module) : ≤6 W typical (7.5 W max.)

Control inputs (buttons)


CPUM^{Mk2}

- ALARM RESET : Used to reset all latched alarms (and associated relays) for all VM600^{Mk2} MPC4^{Mk2} + IOC4^{Mk2} modules in the rack
- Security key lock : Used to enable or disable VM600^{Mk2} rack (CPUM^{Mk2}) security, that is, limit any connections, such as VibroSight[®] software, to "read only" operations.
Note: Each CPUM^{Mk2} module is supplied with two keys for the lock.
- ADMIN : Reserved for future use

SPECIFICATIONS (continued)

Relay characteristics

| | |
|---|---|
| Number | : 2 × user-configurable relays (RL1 and RL2) |
| Type | : Single-pole double-throw (SPDT) / 1 Form C |
| Contact arrangement | : 1 × COM, 1 × NC and 1 × NO contact per relay. See Connectors on page 11 . |
| Rated voltage | : 240 V _{AC} |
| Rated current | : 5 A |
| Maximum breaking capacity (without contact protection) | : 1250 VA |
| Maximum DC load breaking capacity curve: | |

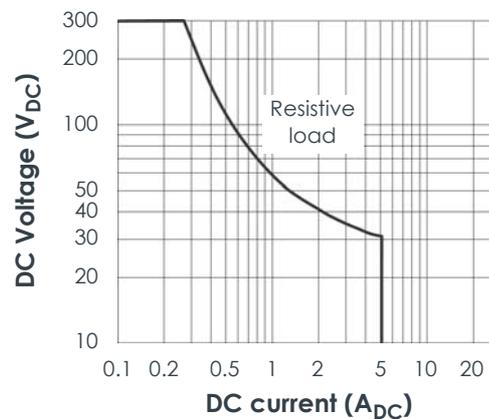

| | |
|-----------------------------------|-----------------------------------|
| Operate / release time | : 5 / 2 ms typ. |
| Dielectric strength test voltages | |
| • Between open contacts | : 1000 V _{AC (RMS)} |
| • Between contact and coil | : 4000 V _{AC (RMS)} |
| Mechanical life | : 15 × 10 ⁶ operations |
| Electrical life | : 10 ⁴ operations |

Note: In general, CPUM^{Mk2} + IOCN^{Mk2} module relays are limited to 240 V_{AC} max. in accordance with the EN 61010 electrical safety standard.

⚠ The CPUM^{Mk2} + IOCN^{Mk2} module's relays are not protective relays and must not be used for critical functions in machinery protection applications, such as initiating the shutdown (trip) of a machine.

Status indicators (LEDs)

CPUM^{Mk2}

| | |
|------------------------------------|---|
| • DIAG MODE1 and MODE2 | : Indicates the mode of operation of the CPUM ^{Mk2} module |
| • DIAG STATUS1 and STATUS2 | : Indicates the status of the CPUM ^{Mk2} module |
| • ETHERNET LINK/ACT1 and LINK/ACT2 | : Indicates the status of the system Ethernet ports |
| • FIELDBUS LINK/ACT1 and LINK/ACT2 | : Indicates the status of the fieldbus Ethernet ports |
| • FIELDBUS STATUS A1 and STATUS A2 | : Helps to indicate the status of the fieldbus interfaces |
| • FIELDBUS STATUS B1 and STATUS B2 | : Helps to indicate the status of the fieldbus interfaces |

SPECIFICATIONS *(continued)*

IOCN^{Mk2}

- J2 (FIELD BUS1) : Separate Link and Activity LEDs to indicate the status of the fieldbus Ethernet link (FIELD BUS1)
- J5 (FIELD BUS2) : Separate Link and Activity LEDs to indicate the status of the fieldbus Ethernet link (FIELD BUS2)
- J6 (ETHERNET1) : Combined Link /Activity LED to indicate the status of the system Ethernet link (ETHERNET1)
- J7 (ETHERNET2) : Combined Link /Activity LED used to indicate the status of the system Ethernet link (ETHERNET2)

Connectors

IOCN^{Mk2}

- J1 (FIELD BUS1) : 9-pin D-sub connector (DCE), female.
Serial-based fieldbus 1 for communication between the CPUM^{Mk2} + IOCN^{Mk2} module (fieldbus server) and a fieldbus client (master).
Note: The J1 connection has functional insulation with a rated insulation voltage of 700 V_{RMS}.
- J2 (FIELD BUS1) : 8P8C (RJ45) modular jack, female.
Ethernet-based fieldbus 1 for communication between the CPUM^{Mk2} + IOCN^{Mk2} module (fieldbus server) and a fieldbus client (master).
Note: The J2 connection is IEEE 802.3 Ethernet compatible and has functional insulation with a rated insulation voltage of 1500 V_{RMS}.
Note: Reserved for future use (under development).
- J3 (RL1 and RL2) : 6-contact screw-terminal connector.
1 × COM, 1 × NC and 1 × NO contact per relay.
Note: Relays are configurable via Modbus using the fieldbus configuration.
- J4 (FIELD BUS2) : 9-pin D-sub connector (DCE), female.
Serial-based fieldbus 2 for communication between the CPUM^{Mk2} + IOCN^{Mk2} module (fieldbus server) and a fieldbus client (master).
Note: The J4 connection has functional insulation with a rated insulation voltage of 700 V_{RMS}.
- J5 (FIELD BUS2) : 8P8C (RJ45) modular jack, female.
Ethernet-based fieldbus 2 for communication between the CPUM^{Mk2} + IOCN^{Mk2} module (fieldbus server) and a fieldbus client.
Note: The J5 connection is IEEE 802.3 Ethernet compatible and has functional insulation with a rated insulation voltage of 1500 V_{RMS}.
Note: Reserved for future use (under development).
- J6 (ETHERNET1) : 8P8C (RJ45) modular jack, female.
System Ethernet 1 for communication between the CPUM^{Mk2} + IOCN^{Mk2} module and either a computer or XMx16 + XIO16T modules.
Note: The J6 connection is IEEE 802.3 Ethernet compatible and has functional insulation with a rated insulation voltage of 1500 V_{RMS}.
- J7 (ETHERNET2) : 8P8C (RJ45) modular jack, female.
System Ethernet 2 for communication between the CPUM^{Mk2} + IOCN^{Mk2} module and either a computer or XMx16 + XIO16T modules.
Note: The J7 connection is IEEE 802.3 Ethernet compatible and has functional insulation with a rated insulation voltage of 1500 V_{RMS}.

SPECIFICATIONS *(continued)*

Physical

CPUM^{Mk2}

- Height : 6U (262 mm, 10.3 in)
- Width : 20 mm (0.8 in)
- Depth : 187 mm (7.4 in)
- Weight : 0.40 kg (0.88 lb) approx.

IOCN^{Mk2}

- Height : 6U (262 mm, 10.3 in)
- Width : 20 mm (0.8 in)
- Depth : 125 mm (4.9 in)
- Weight : 0.25 kg (0.55lb) approx.

ORDERING INFORMATION

To order please specify

| Type | Designation | Ordering number (PNR) |
|---------------------|--|-----------------------|
| CPUM ^{Mk2} | Different versions of the VM600 ^{Mk2} CPUM ^{Mk2} processing module: – Standard version | 601-050-Ax* |
| | The CPUM ^{Mk2} ordering number PNR 601-050-Ax corresponds to the underlying module version 600-050-000- <i>vvv</i> , where “ <i>vvv</i> ” represents the firmware (embedded software) and hardware versions that can be used by a finished product. | |
| IOCN ^{Mk2} | Different versions of the VM600 ^{Mk2} IOCN ^{Mk2} input/output module: – Standard version | 600-051 |
| | The IOCN ^{Mk2} ordering number PNR 600-051 corresponds to the underlying module version 600-051-000- <i>vvv</i> , where “ <i>vvv</i> ” represents the firmware (embedded software) and hardware versions that can be used by a finished product. | |

Notes

*Option code

To order a CPUM^{Mk2} module, the ordering number (PNR 601-050) with option code (Ax) is used to specify the exact type/version of module required:

- A0 specifies a CPUM^{Mk2} module without a configuration.
- A1 specifies a CPUM^{Mk2} module with a configuration.

For example, a complete ordering number for a CPUM^{Mk2} module that is not configured is 601-050-A0.

As such modules are not required to be configured (option code A0), no additional information is required.

Such unconfigured versions of the modules are the standard options for replacement modules / spare parts.

For example, a complete ordering number for a CPUM^{Mk2} module that is configured is 601-050-A1.

As such modules are required to be configured (option code A1), the following additional information must be provided: IP address, Subnet mask and Default gateway (or DHCP), NTP server address (or Disabled), Modbus server configuration file, as required.

Conformal coating

Versions of the VM600^{Mk2} CPUM^{Mk2} and IOCN^{Mk2} rack controller and communications interface module are available with an optional conformal coating (“varnish”) applied to the circuitry of the modules in order to provide additional environmental protection against chemicals, dust, moisture and temperature extremes. Contact Meggitt SA for further information.

RELATED PRODUCTS

| | | |
|---|---|-------------------------------------|
| ABE04x | VM600 ^{Mk2} /VM600 system racks | : Refer to corresponding data sheet |
| MPC4 ^{Mk2} + IOC4 ^{Mk2} | VM600 ^{Mk2} machinery protection and condition monitoring module | : Refer to corresponding data sheet |
| RLC16 ^{Mk2} | VM600 ^{Mk2} relay module | : Refer to corresponding data sheet |
| XMx16 + XIO16T | VM600 ^{Mk2} /VM600 condition monitoring modules | : Refer to corresponding data sheet |
| VibroSight | VibroSight [®] machinery monitoring system software | : Refer to corresponding data sheet |

Meggitt (Meggitt PLC) is a leading international engineering company, headquartered in England, that designs and delivers high-performance components and subsystems for aerospace, defence and selected energy markets. Meggitt comprises four customer-aligned divisions: Airframe Systems, Engine Systems, Energy & Equipment and Services & Support.

The Energy & Equipment division includes the Energy Sensing and Controls product group that specialises in sensing and monitoring solutions for a broad range of energy infrastructure, and control valves for industrial gas turbines, primarily for the Power Generation, Oil & Gas and Services markets. Energy & Equipment is headquartered in Switzerland (Meggitt SA) and incorporates the vibro-meter[®] product line, which has over 65 years of sensor and systems expertise and is trusted by original equipment manufacturers (OEMs) globally.



All information in this document, such as descriptions, specifications, drawings, recommendations and other statements, is believed to be reliable and is stated in good faith as being approximately correct, but is not binding on Meggitt (Meggitt SA) unless expressly agreed in writing. Before acquiring and/or using this product, you must evaluate it and determine if it is suitable for your intended application. You should also check our website at www.meggittsensing.com/energy for any updates to data sheets, certificates, product drawings, user manuals, service bulletins and/or other instructions affecting the product.

Unless otherwise expressly agreed in writing with Meggitt SA, you assume all risks and liability associated with use of the product. Any recommendations and advice given without charge, whilst given in good faith, are not binding on Meggitt SA. Meggitt (Meggitt SA) takes no responsibility for any statements related to the product which are not contained in a current Meggitt SA publication, nor for any statements contained in extracts, summaries, translations or any other documents not authored and produced by Meggitt SA.

The certifications and warranties applicable to the products supplied by Meggitt SA are valid only for new products purchased directly from Meggitt SA or from an authorised distributor of Meggitt SA.

In this publication, a dot (.) is used as the decimal separator and thousands are separated by thin spaces. Example: 12345.67890.

Copyright© 2022 Meggitt SA. All rights reserved. The information contained in this document is subject to change without prior notice.

Sales offices

Meggitt has offices in more than 30 countries. For a complete list, please visit our website.

Local representative

Head office

Meggitt SA
Route de Moncor 4
Case postale
1701 Fribourg
Switzerland

Tel: +41 26 407 11 11

Fax: +41 26 407 13 01

energy@ch.meggitt.com

www.meggittsensing.com/energy

www.meggitt.com

